
ROVING BLUE®

OzoJet™

THE POWER OF EO3

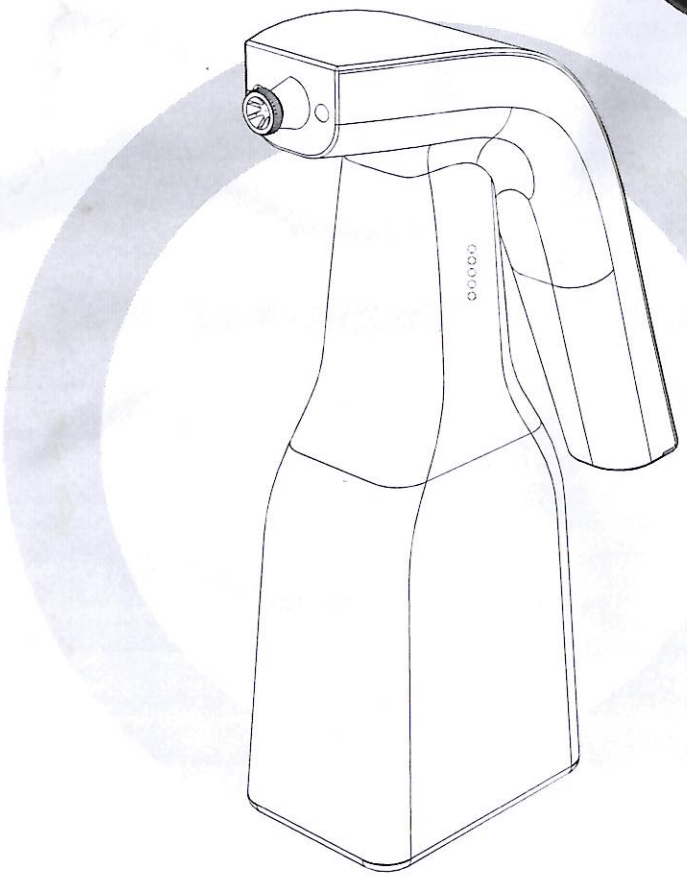

OZONE SPRAY CLEANER MANUAL

TABLE OF CONTENTS

1.Product Specifications..... 02

2.Ozone Spray Cleaner Product Features..... 02


3.Product Instructions..... 03

4.Instructions for Use..... 03

5.Precautions..... 04

6.Ozone Electrolysis Module and Battery Replacement Instructions..... 06

PRODUCT SPECIFICATIONS

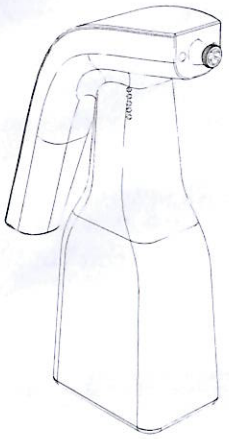


Product Name	Ozone Spray Cleaner
Item No	RB-OS-01
Maximum Power	12W
Battery Capacity	2600mAh
Applicable Battery Capacity Range	2000-5000mAh
Battery Type	18650 (rechargeable lithium battery)
Water Tank Capacity	500mL
Spray Volume	Adjustable 50–200 mL/min
Water Source	Tap water
Water Quality (TDS)	65-350PPM
Operating Water Temperature	10-40°C
Ozone Concentration	0.5-3.0mg/L (For instance, at a TDS value of 220 ppm, water temperature of 25°C, and spray volume of 60 ml/min, the measured concentration is 2.5 mg/L)
Charging Adapter Requirements	5V-2A Charging time: 3 to 4 hours
Size/Weight	260x173x65mm/410g

PRODUCT FEATURES


This Ozone Spray Bottle is a magical multi-functional tool that combines cleaning, sterilization, and deodorization in one!

Designed with a unique style perfect for high-end settings, this spray bottle instantly generates ozone water with a sterilization rate of over 99%. It is also an eco-friendly and safe essential for every household–a must-have hygiene and cleaning tool at home.

- ·High-efficiency ozone generation
- ·Replaceable battery
- ·Replaceable electrolysis module
- ·Adjustable spray volume
- ·Built-in LED light
- ·No chemical residues
- ·A planet- and people-friendly eco product
- ·Versatile device: covers sterilization, cleaning, and deodorization

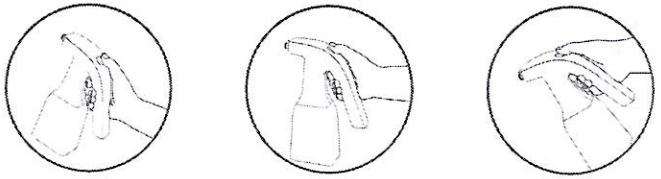

PRODUCT INSTRUCTIONS

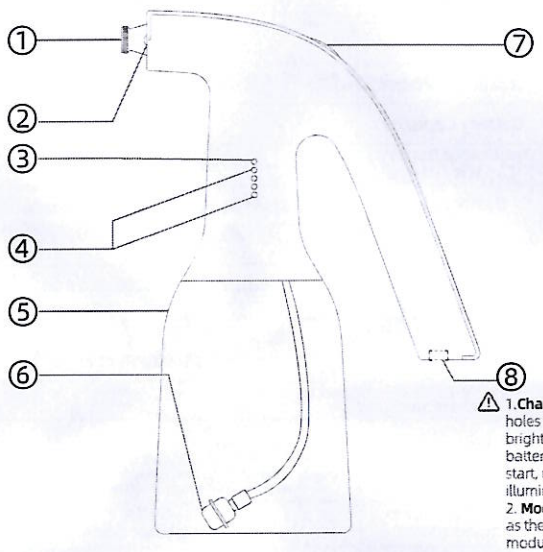



①Nozzle
②LED Light
③Module Replacement Indicator Light
④Charging/Discharging Indicator Light
⑤Water Tank
⑥Filter Gravity Ball
⑦Power Button
⑧Charging port（DC5V-2A）


⚠ 1.**Charging/Discharging Indicator Light**: The lights in the four holes below indicate the charge/discharge status. When the brightness of the four lights gradually dims, it indicates the battery power is decreasing until the product can no longer start, requiring recharging. When all four lights are fully illuminated, the battery is fully charged.
2. **Module Replacement Indicator Light:** The first light serves as the module replacement indicator. When the electrolytic module needs to be replaced, the red light will flash.


INSTRUCTIONS FOR USE


Before charging, make sure the sprayer is turned off. If charging for the first time, or after a long period of non-use, fully charge the device. Charging usually takes about 3-4 hours.When fully charged, please disconnect the power supply. If the product is stored for more than three months, please recharge it once.
*Do not keep the product connected to the power supply for more than 24 hours.

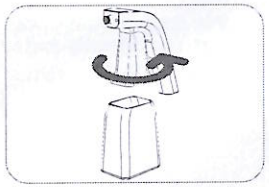

1. Unscrew the water tank by turning it counterclockwise.

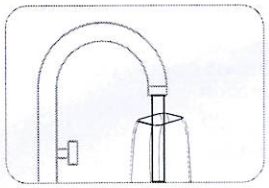
2. Fill with tap water.

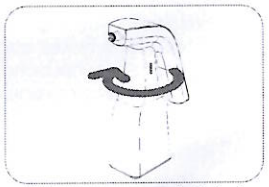
3. Screw the water tank clockwise to secure it in place against the machine body.

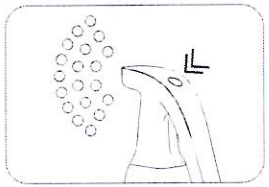
4. Press the switch once to turn on the device. Do not press the switch twice or multiple times in succession, nor hold it down continuously.

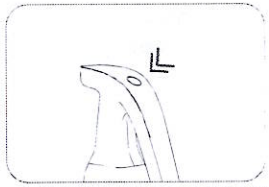
5. Press the switch once to turn off the device. After shutdown, wait at least 6 seconds before restarting.

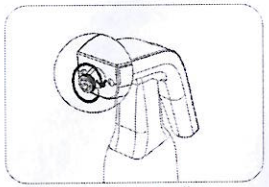
6. The rotary nozzle allows adjustment of the water spray volume.

PRECAUTIONS

This manual contains basic instructions for the use and maintenance of this product. For more detailed information, please contact customer service or your local authorized dealer.

Safety and Notice Symbols:

⚠ "Warning" indicates a potential hazard which, if not avoided, could result in death or serious injury.

⚠ "Caution" indicates a potential hazard which, if not avoided, may result in personal injury or property damage.

Electrical Safety and Basic Precautions

All servicing work (except for routine maintenance and the replacement of battery and electrolytic module) must be carried out by authorized and qualified technicians. Do not attempt to disassemble, repair, or modify this product yourself. Doing so will void the warranty and may result in fire or electric shock.

If the product malfunctions or is damaged in any way, unplug the device and contact the international service department or an authorized local dealer for service or repair.

-Do not damage the power supply or power plug. A damaged power supply or plug may cause fire or electric shock.

-Do not stretch, bend, pull, twist, fold, tie, or attempt to modify the power cord or power plug.

-If the power supply or plug is damaged, it must be replaced by the manufacturer, an authorized service dealer, or qualified personnel to avoid hazards.

-Connecting too many devices to the same outlet may cause the outlet to overheat and result in fire.

-Do not use any power voltage other than that specified for the product and its power supply. Using any other voltage may cause fire or electric shock.

Warning

- Do not plug in or unplug the power cord with wet hands, as this may cause electric shock or injury.
- Do not use this product if the power plug prongs are loose, as this may cause fire, electric shock, or short circuit. Before use, make sure the power plug is fully inserted into the power outlet.
- Keep the product and power cord away from heat sources or hot surfaces, including heaters, stoves, and similar appliances.
- Do not immerse the machine in water or spray water onto it, as this may damage the machine or cause electric shock.
- Stop using this product immediately if any of the following abnormalities or malfunctions occur:

- The power supply, power cord, or power plug is damaged.
- The power supply, power cord, or power plug becomes abnormally hot.
- The product casing becomes abnormally hot or deformed.
- The product emits smoke or a burning smell.
- Certain parts of the product show cracks, looseness, instability, or any other abnormal condition that cannot be identified.

· If any of the above conditions occur, immediately unplug the product and request after-sales service. Continuing to use this product may result in fire, electric shock, or injury.

Usage Precautions


1. Use tap water only. For best performance, water conductivity should be >110 μS. Maintain room temperature between 10-40 °C (50-104 °F).
2. Do not use any other water sources such as seawater or purified water.
3. Always ensure there is water in the bottle before use.
4. Do not drink the electrolyzed ozone water generated by this product. (The water is non-toxic and additive-free, and accidental small intake is not harmful.)
5. Children should use this product only under adult supervision.
6. Do not spray directly onto electrical appliances, as liquid may penetrate into the device and cause malfunction.
7. It is strictly forbidden to spray directly onto organs such as the eyes or ears.

PRECAUTIONS

8. The actual measured electrode lifespan is 200 hours (tested under the following conditions: water source being pure water or distilled water with TDS below 5, subsequently adjusted to 150 TDS using table salt; 100 litres of pre-adjusted water supplied at 25°C; electrode module powered at DC 6V; cycled through 30 minutes of operation followed by 15 minutes of shutdown).
9. The electrode lifespan is indicated by the warning light. Electrode durability varies based on user conditions, as each application scenario differs. Accurate lifespan cannot be guaranteed. (Example: 200 hours at 30 minutes daily usage = 200H × 60min/30min/365D = 1 year). Both electrodes and batteries are consumable parts.
10. The water tank and nozzle are classified as consumable items.
11. The battery has a lifespan of 500 full charge-discharge cycles.
12. Prior to charging, ensure the charging port is completely dry.

Specific Safety Information

- For your personal safety and to prevent accidental damage to the product, please ensure that you read and understand this manual thoroughly.
- Always disconnect all circuits before performing any repair, maintenance, or installation work.
- After performing repair, maintenance, or installation, always ensure that all factory-installed parts and components are correctly reinstalled and in proper condition.
- Do not use inappropriate tools, processes, or procedures, as this may damage device components. Do not discard any loose parts received with the device, they may be required for proper and safe installation and operation. Keep the unit away from open flames (>100 cm) to avoid potential hazards or damage. Do not attempt any repair if the unit is damp. Always switch off the power supply and disconnect the power cord before carrying out any repair work. Failure to do so may result in serious injury or death.
- Ensure that the power supply and water supply meet the specifications required for this product. Failure to install, operate, or maintain this device as instructed may void the warranty and result in personal injury or product damage.

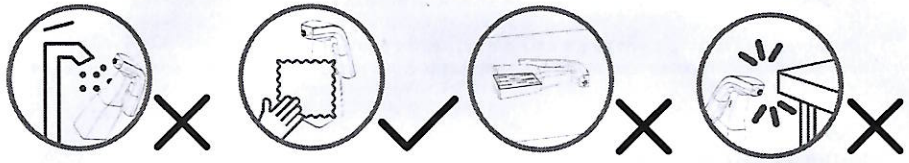

This product is not waterproof. Do not rinse it directly with water.


Clean the exterior with a damp cloth only.

⚠ **Do not place the spray bottle horizontally on a surface whilst the water tank contains liquid.**

Handle with care to avoid impacts or drops from heights. Impacts to the body may cause structural damage that affects normal functionality.

Problems	Possible Reasons	Solution
Red indicator light flashing	Ozone module is damaged	Replace the ozone module
The product fails to charge The operational time after a full charge is less than 10 minutes	Battery is damaged	Replace the battery
Abnormal water flow from the nozzle	Nozzle improperly adjusted or damaged	Adjust water flow by rotating the nozzle or replace the nozzle

OZONE ELECTROLYSIS MODULE AND BATTERY REPLACEMENT INSTRUCTIONS

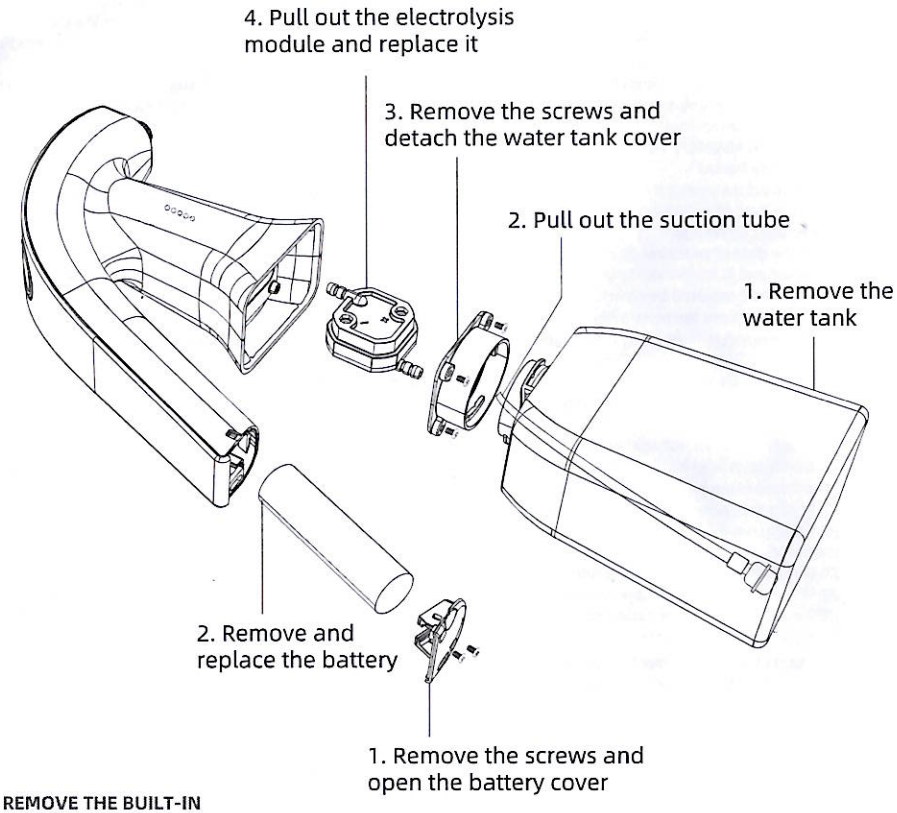

REMOVE THE BUILT-IN RECHARGEABLE BATTERY

When removing the battery, the device must be powered off. The battery should be disposed of safely

When using tools to open the device or when disposing of the rechargeable battery, please take the necessary safety precautions.

When handling the battery, make sure your hands, the device, and the battery are all dry.

To prevent accidental short circuits after removing the battery, do not let the battery terminals come into contact with metal objects (such as coins, hairpins, or rings). Do not wrap the battery in aluminum foil. Before disposal, cover the battery terminals with tape or place the battery in a plastic bag.

⚠

Do not place the product or its battery in a microwave oven or on an induction cooker.

• To prevent the battery from overheating or releasing toxic or harmful substances, do not open, modify,puncture, damage, or disassemble the product or battery. Do not short-circuit, overcharge, or reverse charge the battery.

• If the battery is damaged or leaking, avoid contact with skin or eyes. In case of accidental contact, rinse immediately with clean water and seek medical attention

PRODUCT WARRANTY SERVICE CARD

IMPORTANT NOTE:

According to the national "Three Guarantees" service regulations, this card serves as the warranty certificate. With this card and a valid proof of purchase, you are entitled to the after-sales services specified under the national Three Guarantees policy. Please keep this card properly and present it when requesting warranty service. Product Return and Exchange Policy:

(1) Within 7 days from the date of purchase, if the product has a performance failure, consumers may choose a refund, replacement, or repair. (2) Within 15 days from the date of purchase, if the product has a performance failure, consumers may choose replacement or repair.

PRODUCT WARRANTY POLICY:

1.Warranty Period:

The product is covered by a 15-month free warranty against manufacturing defects under normal use, starting from the date of manufacture.

2.Warranty Coverage:

From the date of purchase (subject to invoice or valid proof of purchase), if a malfunction occurs within the warran ty period and is confirmed by our after-sales service center to be caused by product quality issues under normal use, it will be repaired free of charge.

3.Exclusions from Responsibility:

(1) The product is covered by a 15-month free warranty against manufacturing defects under normal use from the date of manufacture;

(2) "Three Guarantees" service card or proof of purchase that has been erased, altered, or where the product information on the card or proof of purchase does not match the actual product;

(3) Damage caused by human factors (e.g., the user disassembling the product, improper connections, connecting to an inappropriate voltage, or not following the instructions in the manual);

(4) Damage caused by handling, drops, or other accidents, as well as damage resulting from natural disasters or other force majeure

(5) Products repaired or modified by service units or individuals not authorized by the company;

(6) Quality issues are limited to functional failures and do not include the user's subjective dissatisfaction with the product;

(7) Natural wear and tear of consumable parts such as the outer casing;

(8) The electrolytic ozone module and battery are considered consumables;

(9)The production batch code (including serial number) on the product body has been defaced, altered, severely worn, or rendered illegible.

Production Batch Number Explanation:

Taking "IM500 2511 X" as an example: ①: Product Model ②: Date of Manufacture ③: Company Code

4.Contact Information:

For any issues during use, users can call _____ for service support.

PRODUCT WARRANTY CERTIFICATE

CUSTOMER NAME			CONTACT NUMBER	
DETAILED ADDRESS				
PRODUCT MODEL			PROOF OF PURCHASE	
CHANNELS			PURCHASE DATE	
BRIEF DESCRIPTION OF THE MAIN ISSUES				
REPAIR RECORDS	REPAIR DATE	DELIVERY DATE	MALFUNCTION DESCRIPTION	REMARKS
PRODUCT SERIAL NUMBER (S/N)				

Remarks

1.Please fill in the contents of the product warranty certificate truthfully.
2.For after-sales service, please present this certificate along with the proof of purchase.
3.This certificate can be photographed and sent to the after-sales service at _____.
4.This certificate will not be reissued if lost, please keep it properly.